

FELLING TRAILERS

MAINTENANCE SCHEDULE - AIR BRAKE TRAILERS

ITEM	FUNCTION REQUIRED	WEEKLY	EVERY 3 MONTHS / 3,000 MILES	6 MONTHS / 12,000 MILES	12 MONTHS / 25,000 MILES
WHEEL TORQUE	Check at 50 miles		●		
BRAKE AIR SYSTEM	Test that they are operational		●		
BRAKE ADJ & WEAR	Inspect, tighten & adjust	●	●		
SLACK ADJUSTERS	Inspect, tighten & adjust	●		●	●
LIGHTS	Inspect and test that they are operational	●			
WIRING & CONNECTIONS	Inspect	●			
FASTENERS	Inspect and tighten	●			
KING PIN & PLATE	Inspect, Clean & Lubricate	●			
RELAY VALVES	Inspect & Clean				●
CAMSHAFT ASSEMBLY	Inspect & Lubricate	●			●
HUB OIL	Inspect, lubricate & when needed replace	●			●
WHEEL BEARINGS & CUP	Inspect for corrosion or wear, Clean & repack	●		●	
AIR RIDE SUSPENSION	Inspect, Tighten/adj. torque as needed		●		●
UNDERCARRIAGE ROLLERS	Lubricate	●	●		
HYDRAULIC OIL	Inspect & replace as needed	●			●
HYDRAULIC FILTER	Replace	●		●	
HOSES	Inspect & replace as needed	●	●		●
WINCH GEAR CASE	Inspect	●	●		
TIRE INFLATION & WEAR	Inflate tires to mfg.'s specifications	●	●		●
WHEEL LUG NUTS	Tighten to specified torque values	●	●		
SUSPENSION ALIGNMENT	Inspect for bending, loose fasteners & wear	●	●		