

FELLING TRAILERS

MAINTENANCE SCHEDULE - AIR BRAKE TRAILERS

| ITEM | FUNCTION REQUIRED | WEEKLY | EVERY 3 MONTHS / 3,000 MILES | 6 MONTHS / 12,000 MILES | 12 MONTHS / 25,000 MILES |
|-----------------------|---|--------|------------------------------|-------------------------|--------------------------|
| WHEEL TORQUE | Check at 50 miles | | ● | | |
| BRAKE AIR SYSTEM | Test that they are operational | | ● | | |
| BRAKE ADJ & WEAR | Inspect, tighten & adjust | ● | ● | | |
| SLACK ADJUSTERS | Inspect, tighten & adjust | ● | | ● | ● |
| LIGHTS | Inspect and test that they are operational | ● | | | |
| WIRING & CONNECTIONS | Inspect | ● | | | |
| FASTENERS | Inspect and tighten | ● | | | |
| KING PIN & PLATE | Inspect, Clean & Lubricate | ● | | | |
| RELAY VALVES | Inspect & Clean | | | | ● |
| CAMSHAFT ASSEMBLY | Inspect & Lubricate | ● | | | ● |
| HUB OIL | Inspect, lubricate & when needed replace | ● | | | ● |
| WHEEL BEARINGS & CUP | Inspect for corrosion or wear, Clean & repack | ● | | ● | |
| AIR RIDE SUSPENSION | Inspect, Tighten/adj. torque as needed | | ● | | ● |
| UNDERCARRIAGE ROLLERS | Lubricate | ● | ● | | |
| HYDRAULIC OIL | Inspect & replace as needed | ● | | | ● |
| HYDRAULIC FILTER | Replace | ● | | ● | |
| HOSES | Inspect & replace as needed | ● | ● | | ● |
| WINCH GEAR CASE | Inspect | ● | ● | | |
| TIRE INFLATION & WEAR | Inflate tires to mfg.'s specifications | ● | ● | | ● |
| WHEEL LUG NUTS | Tighten to specified torque values | ● | ● | | |
| SUSPENSION ALIGNMENT | Inspect for bending, loose fasteners & wear | ● | ● | | |